

SUPERPRESSURE

AIR OPERATED DIAPHRAGM-TYPE COMPRESSORS

46-14021-2	TWO STAGE	10K & 30K PSI
46-14023	TWO STAGE	6K & 10K PSI
46-14025-2	SINGLE ENDED	10K PSI
46-14035-2	DOUBLE ENDED	10K PSI
46-14060-2	SINGLE ENDED	30K PSI
46-14065	SINGLE ENDED	6K PSI
46-14067	DOUBLE ENDED	6K PSI
46-14068	TWO STAGE	6K & 30K PSI

This Manual is for:

Compressor Part No. : _____
Sales Order No. : _____
Serial No. : _____
Date Manufactured : _____

NEWPORT SCIENTIFIC, INC

8246-E SANDY COURT

JESSUP, MD 20794

PHONE: 301-498-6700 FAX: 301-490-2313

WEBSITE: www.newport-scientific.com

E-MAIL: sales@newport-scientific.com or technical@newport-scientific.com

CONTENTS

- I. INSPECTION
- II. INTRODUCTION
- III. PRINCIPLES OF OPERATION
- IV. CHARACTERISTICS
 - a. Gas/Liquid Service Conversion
 - b. Ordering Data Check Valves
- V. INSTALLATION & OPERATION
 - a. Installation
 - b. Operation
 - c. Priming Procedure
 - d. Verify Check Valve Operation
- VI. TROUBLESHOOTING
- VII. MAINTENANCE
 - a. Stroke Adjustment Procedures
 - 1. Single Head Compressors
 - 2. Double Head Compressors
 - b. Diaphragm Replacement
 - c. Gas Check Valve Replacement
 - d. Pressure Limiting Device Adjustment
- VIII. RECOMMENDED SPARE PARTS & ½" PISTON ASSEMBLY # 85001000300
- IX. ASSEMBLY DRAWINGS & CAPACITY CURVES – SEE LIST
- X. SPECIFICATIONS

I. INSPECTION

If damage is discovered upon unpacking the equipment, an immediate request should be forwarded to the delivering carrier to perform an inspection and prepare a concealed-damage report. Concurrently, the nature and extent of damage should be reported to Newport Scientific, Inc., giving catalog and serial numbers, so that action may be initiated to replace damaged parts, or instructions issued for the return of the apparatus.

II. INTRODUCTION

The Superpressure Diaphragm-Type Gas Compressors handle fluids of all types with absolute purity. The fluid being compressed comes into contact only with clean, dry, corrosion-resistant metallic surfaces. The compressors are suited for all types of laboratory applications as well as for pilot plant and industrial applications requiring low gas flows. The compressors operate at a 14 to 1 maximum compression ratio and are designed to circulate or boost gas from a low pressure to pressures of 6,000, 10,000, or 30,000 psi. These compressors may be used for testing and calibration of critical devices such as missile system components, etc., where hydrostatic pressure testing and calibration would be difficult or impossible.

These compressors may be easily cleaned. Fluids other than ordinary oil, such as oxygen-compatible fluorinated products, may be used for diaphragm pulsing if required for specific applications. Compressors can be constructed of materials other than those normally supplied for particular corrosion-resistant applications on special order. The compressors when specifically cleaned and services, are also used for oxygen service.

These compressors are adaptable to either gas or intermittent liquid service. Changeover from one to the other is accomplished by interchanging a set of intake and exhaust check valves. Single or double ball check valves are available from Newport Scientific, Inc. which enable the compressors to be used for intermittent liquid service.

III. PRINCIPLES OF OPERATION

The plunger of the compression head is reciprocated as in a pump. Oil from the storage bulb is compressed by the plunger, which in turn pulses the diaphragm. The fluid to be compressed is taken in and discharged on the opposite side of the diaphragm through the check valves in the head plate on the down and up stroke of the diaphragm. Oil is drawn into the chamber beneath the diaphragm by the suction created on the plunger backstroke. Excess oil in the chamber can flow back to the storage bulb during the forward plunger stroke through the pressure limiting device. This built-in hydraulic device is manually adjustable and ensures that the discharge pressure of the compressor cannot exceed a preset limit. The plunger stroke is preset so that under normal operating conditions, oil will not flow through the pressure limiting device unless the maximum discharge pressure is exceeded.

IV. CHARACTERISTICS

- Contamination-free gas compression.
- Parts in contact with gas are made of the following materials:
- Upper head plates, 17-4PH SS; Valves, 302, 304, 316, 17-4PH SS and Nylon 101; Diaphragms, 302 SS.
- Compressor is suitable for suction at constant or continually varying suction pressures up to the maximum permissible discharge pressure.
- Compression ratios of up to 14-to-1 are obtainable for each stage.
- Diaphragm life in excess of 500 hours of operation normally attained.
- Absence of stuffing box permits leak-free operation.
- Elastomer packing provides a leak-free oil seal, long life and never needs tightening.
- Interchangeable check valves permit either continuous gas or intermittent liquid service.
- Check valves can be easily removed for cleaning and replacement.
- Floating hydraulic plunger ensures minimum wear on packing.

GAS/LIQUID SERVICE CONVERSION

These compressors can be adapted for intermittent liquid service. To convert from gas to intermittent liquid service or vice-versa, replace the set of intake and exhaust check valves on the compressors with the set specified in Table for the particular service application. On the 6,000 and 10,000 psi gas head, for intermittent service with normal liquids, double-ball check valves must be used. Difficult liquids are water, volatile hydrocarbons, low or high-viscosity liquids and liquids containing sediments. On 30,000 psi gas heads, for intermittent liquid service, double-ball check valves must be used for all liquids.

PRECAUTION

****Liquid service check valves CANNOT be used on Two-Stage Compressors.****

ORDERING DATA AND SPECIFICATIONS FOR CHECK VALVES

COMPRESSOR CATALOG NUMBER	QTY	STANDARD GAS CHECK VALVES INLET/DISCHARGE	LIQUID SERVICE SINGLE BALL INLET/DISCHARGE	LIQUID SERVICE DOUBLE BALL INLET/DISCHARGE
46-14025-2	1 Ea	44-11102 44-11107	44-14100 44-14115	44-14210 44-14215
46-14065				
46-14035-2	2 Ea	44-11102 44-11107	44-14100 44-14115	44-14210 44-14215
46-14023				
46-14067				
46-14060-2	1 Ea	44-13100 44-13120		44-13140 44-13160
46-14021-2	1 Ea	44-11102 44-11107		
46-14068				
		44-13100 44-13120		

*Also used where ultra-pure cleaning is required.

Each check valve listed in Table has a $\frac{1}{4}$ inch O.D. female tubing opening. Special-Inlet Adapter 45-16705 for liquid service can be used with the 44-13140, 44-14100, and 44-14210 Intake Check Valves when a $\frac{1}{4}$ inch NPT connection is desired. This adapter converts the $\frac{1}{4}$ inch O.D. female connection to $\frac{1}{4}$ inch NPT, female.

V. INSTALLATION & OPERATION

CAUTION

For oxygen service, use HALOCARBON or similar oils to prevent reaction with the oxygen. Thoroughly clean vital areas for oxygen service. The use of a HALOCARBON grease on bolt threads and other hardware is suggested. Recommendations for special applications may be obtained from the SUPERPRESSURE Engineering Dept.

INSTALLATION

1. Remove plug from oil reservoir, remove plugs from inlet and discharge gas check-valves and from air-supply connections.

NOTE

Unit may be bench operates without tie-down bolts. Mounting holes are provided where their use is necessary. Mounting data may be obtained from the detailed drawings.

2. An air-filter pressure-regulator-lubricator (Cat. No. 46-13753) is included as part of the compressor. A dry air source with pressure not to exceed 125 psi is connected to the air filter.
3. Air-exhaust ports exhaust through mufflers to the atmosphere. Where desirable, the exhaust may be vented away from the unit. We recommend a minimum vent-pipe of 3/4-inch to preclude malfunction of air-cycling valve because of backpressure.
4. Fill lubricator to correct level with lubricating oil (SAE 20)* Oil feed rate is factory-set at 2-drops /minute at maximum operating pressure. This oil provides the only lubrication necessary for the air operator.
5. Install a 5- to 10- micron, dry-type filter (Cat. No. 49-14405) in the gas-inlet line between the gas supply and the compressor.
6. Connect gas-suction line (use SUPERPRESSURE Tubing, Cat. No. 45-11020) to port on head marked "IN" on units 46-14021-2, 46-14025-2, 46-14060-2, 46-14023 46-14068 and 46-14065. Connect the gas-suction line to inlet manifold on unit 46-14035-2 and 46-14067.

OPERATION

NOTE

Before turning on the air pressure, turn out (unscrew) the pressure regulator adjustment screw. The unit can be started at the air-shutoff valve (not supplied) in the air-supply line, or by screwing in the adjustment on the pressure regulator. The latter operation is not normally intended for start-stop control, but is used to regulate the maximum pressure to the compressor.

*Newport Scientific, Inc. uses Oildyne Hydraulic Fluid 15-40.

PRECAUTION

If dirt enters the compressor, the diaphragm and check valves may be damaged. It is absolutely essential that the incoming gas is filtered. We suggest a 5 or 10 micron in-line Filter such as Cat. # 49-14405.

Also any lines to be placed between the Filter and the compressor should be thoroughly cleaned. Flush with solvent using a syringe, and blow dry with clean air or gas. (Even a new piece of high pressure tubing may contain sufficient particulate matter to foul the check valves).

To operate the motor-driven compressor, turn on electric power to the compressor. Observe the gas discharge pressure to ensure that the compressor is operating properly. If the compressor fails to build-up pressure, shut off power and perform the "Priming Procedure" in the next paragraph.

PRIMING PROCEDURE

To prime the compressor, perform the following:

1. Close off the gas discharge line.
2. Apply suction pressure to the compressor inlet. (The term suction pressure means the positive pressure applied to the compressor inlet, e.g. a minimum suction pressure of 700 psi is recommended for 10,000 psi discharge on 46-13411-2).
3. Add oil to the reservoir if required.
4. Loosen the stop nut on the top of pressure limiting device, being careful not to lose the setting. Reverse the set screw back until it no longer applies tension to the spring. The stop nut will turn with the set screw, thereby maintaining the original Factory setting.
5. Run the compressor. While it is running, loosen the large gland nut at the base of the pressure limiting device by 1-1/2 turns, and pull back on the body of the limiter to release the orifice piece. This removes all force from the seat and allows fresh oil to be pulled in from the reservoir.

The large gland nut should be loosened just for a couple of strokes of the compressor and then retightened. Some oil will be spilled out during the above operation.

6. Return the setscrew to its' original setting and retighten the stop nut.

PROCEDURE FOR VERIFYING PROPER CHECK VALVE OPERATION

1. Install pressure gauges on Compressor Inlet & Outlet, if not already present.
2. Apply suction pressure of 1,000 psi to Compressor Inlet.
3. Operate Compressor.
4. If either gauge fluctuates wildly then remove check valves and clean or replace.

VI. TROUBLESHOOTING

TROUBLE	PROBABLE CAUSE	CORRECTIVE ACTION
Air Drive Inoperative	1.Low air pressure, or clogged air line filters 2.Improper lubrication 3.Loose or broken connection 4.Malfunction of pilot valves or air-transfer valve 5.Improper stroke adjustment	1.Check air pressure. Clean air line or filter, install proper size air line or filter, install proper size air line (3/8" pipe min). 2.Check lubricator adjustment. Set to 2 drops min., running free. 3.Tighten or replace. 4.Replace pilot valve, air-transfer valve or both. 5.Refer to Stroke Adjustment.
Pump stalls before pressure develops	1.Insufficient air pressure 2.Air line restriction 3.Improper cylinder lubricator 4.Pressure limiting device locked in	1.Obtain proper air pressure. 2.Remove restriction. 3.Check lubricator and grade of oil used. Set to 2 drops min. Running free. 4.Back-off pressure limiting device screw.
Pump operative developing less than max.	1.Inlet pressure too low 2.System leakage 3.Air pressure too low 4.Faulty inlet & discharge check valve	1.Keep compression ratio at 14:1. 2.Isolate pump and check for leaks. 3.Obtain proper air pressure. 4.Check gauges in inlet and discharge line with pump cylinder under normal conditions. If inlet gauge fluctuates radically, replace inlet check valve assembly. If discharge gauge fluctuates radically, replace discharge check valve assembly.

TROUBLE	PROBABLE CAUSE	CORRECTIVE ACTION
Pump operative developing less than max. pressure	5.Pump not primed. 6.Defective hydraulic check valve or pressure limiting device 7.Improper stroke adjustment	5.Refer to priming procedure. 6.Replace faulty valve or device. Observe oil reservoir for check valve action. 7.Refer to Stroke Adjustment.
Pump developing maximum pressure, output volume incorrect	1.External leaks on check valve and diaphragm (check by bubble testing) 2.Oil pressure limiter set too low. Oil level in oil reservoir will move up & down with each stroke. 3.Malfunction in inlet and discharge check valves. 4.Low input pressure 5.Ruptured diaphragm(s) 6.Improper stroke adjustment	1.Tighten or replace as necessary. 2.Increase by turning IN adjustment screw to 6,600 psi, 11,000 psi, or 32,000 psi, depending on type of compressor. <u>DO NOT</u> adjust this device unless necessary. 3.See above. 4.Check for proper compensation ratio. 5.Replace with new diaphragm(s). 6.Refer to Stroke Adjustment.

VII. MAINTENANCE

STROKE ADJUSTMENT PROCEDURES

Pivot-valve assembly is located on threaded supports and a plate. The plate has elongated holes to allow the pivot valves to slide either toward or away from the cam for fine-stroke adjustments. The stroke setting at the pivot-valve assembly is made at the factory and should not normally require changing; however, if it becomes necessary to change or reset, proceed as follows:

SINGLE-HEAD COMPRESSORS

1. Position the ball valve so that the space between the bottom face of the mounting plate and the upper face of the spacer is approximately 1-1/16". Lock in place. (See Compressor Assembly Drawing)
2. Loosen the two hex-head screws holding the ball valves to the mounting plate. Slide both ball valves inward toward the plunger. Tighten both screws to hold valves in place.
3. Start compressor with no gas pressure. Operate very slowly.
4. Block the exhaust port of the upper ball valve with a finger and let the plunger go to the very bottom of the bore. Keep finger in place.

5. With inside calipers measuring the distance between the face of the body (not the packing nut) and the face of the coupling.
6. Remove finger from the ball valve exhaust. The plunger will return. Let the compressor continue to run slowly.
7. Increase the calipers measurement 1/16"; i.e., if the measurement was 5/16", increase to 3/8".
8. Loosen screws slightly on ball valves. Insert calipers between body face and coupling.
9. Slide both ball valves out until the coupling touches the calipers while compressor is running. This must be done in very small increments.
10. Tighten the screws on the ball valves and again measure stroke.
11. Allow compressor to run for several minutes and observe the oil reservoir bowl. If it appears that the oil level is rising and falling with each stroke, or if the pressure limiting device is set for too low a pressure, refer to paragraph setting pressure limiting device.
12. To shorten the stroke, break the screws and very tightly tap the ball valves in. Tighten screws.
13. Repeat steps 11 and 12, above, until the oil level remains steady.

CAUTION

The pressure limiting device should never heat during operation.

DOUBLE-HEAD COMPRESSORS

1. Position the ball valve so that the space between the bottom face of the mounting plate and the upper face of the spacer is approximately 1-1/16". Lock in place. (See Compressor Assembly Drawing).
2. Break the two hex-head screws holding the ball valves to the mounting plate. Slide both ball valves in toward the plunger. Tighten both screws to hold valves in place.
Perform steps 1 and 2 on both ends before starting compressor.
4. Start the compressor with no gas pressure.
5. Block the exhaust port of the upper ball valve with a finger and let the plunger go to the very bottom of the bore.
6. Using inside calipers, measure the distance between the face of the body (not the packing nut) and the face of the coupling.

7. Remove finger from the ball valve exhaust. The plunger will return. Let the compressor continue to run slowly.
8. Open the calipers 1/16"; i.e., if the measurement was 5/16", increase to 3/8".
9. Loosen screws slightly on ball valves. Insert calipers between body face and coupling.
10. Slide both ball valves out until the coupling touches the calipers while compressor is running. This must be done in very small increments.
11. Tighten the screws on the ball valves and measure the stroke again.
12. Repeat steps 2 through 8 for the other ball valve.
13. Repeat steps 11, 12, and 13 above.

REPLACING DIAPHRAGM

1. Shut down unit, closing off gas inlet and discharge lines.
2. Crack connections to gas check valves to allow trapped pressure to escape.
3. Remove all gas connections.
4. Secure hydraulic section in some form of clamping device.
5. Remove head bolts, remove head, and inspect. Inspect valves, clean and cover with clean cloth.
6. Remove diaphragm.

NOTE

The 6,000 and 10,000 psi units have one diaphragm per head; the 30,000 psi units have two diaphragms per head.

7. Remove preservative from new diaphragm(s) thoroughly clean and put new diaphragm(s) in place.
8. Install head connections by reversing removal procedures. (Use check valve as guide for proper relocation).

NOTE

Lubricate washer and bolt threads with bearing grease for normal operation; use HALOCARBON grease for oxygen services.

9. Hand tighten all head bolts. Then sequentially tighten opposing bolts with torque wrench in equal increments of 10 ft-lbs until final tightness. (Torque to approximately 150 ft-lbs for 6,000 and 10,000 psi Head and 350 ft-lbs for 30,000 psi Head)
10. Attach all gas connections.
11. Prime the compressor as described in Priming Instructions.

GAS CHECK VALVE REPLACEMENT

1. Shut down unit as previously described.
2. Remove gas connections as previously described.
3. Remove check valves and examine for wear or damage.
4. Replace seat assembly in check valves if required.
5. If check valves are of the single ball or double ball type, it is recommended that they be completely replaced if found defective.

ADJUSTMENT OF PRESSURE LIMITING DEVICE

NOTE

The Pressure Limiting Device was preset by Newport Scientific and should never need re-adjustment. This device was set to release oil back to the storage bulb when the discharge pressure reached 110% of the maximum pressure rating of the compressor. This setting was obtained by turning the set screw at the top of the pressure limiter until the desired release pressure was obtained.

The set screw was then held stationary while the outer stop nut was tightened down to the limiter body to lock in the setting. As long as the stop nut is not turned relative to the set screw, the set screw can be turned out and in for priming and still maintain the original factory setting.

If the stop nut has been turned relative to the set screw, the following procedure can be followed to reproduce the original setting.

1. Install pressure gauges in the inlet & outlet lines of the compressor if not already present.
2. Make sure the system is primed by performing the **Priming Procedure**.
3. Make sure check valves are operating properly according to the **Procedure for Verifying Proper Check Valve Operation**.
4. Stop compressor operation.

5. Loosen outer stop nut on top of pressure limiter and turn set crew back until all tension is removed from the spring.
6. Apply suction pressure of at least 1000 psi.
7. Adjust set screw slowly inward to obtain the following maximum discharge pressure -
 - for 6,000 psi compressors, set to 6,600 psi
 - for 10,000 psi compressors, set to 11,000 psi
 - for 30,000 psi compressors, set to 33,000 psi

NOTE

For a two stage compressor, set up to 5,000 psi on first stage.

NOTE

Outlet pressure gauge needle will fluctuate slightly with each piston stroke, use the highest reading on each stroke when setting the pressure.

8. Hold set screw stationary and tighten outer stop nut to lock in pressure setting.

NOTE

It is not recommended that the pressure limiter be set at a pressure lower than the original factory setting.

VIII. RECOMMENDED SPARE PARTS

DESCRIPTION	CAT. NO OR PART NO.	46- 14025-2	46- 14060-2	46- 14035-2	46- 14021-2	46- 14023	46- 14068	46- 14065	46- 14067
CHECK VALVE, HYDRAULIC	44-14110	1	1	2	2	2	2	1	2
CHECK VALVE, INTAKE	44-11102	1		2	1	2	1	1	2
CHECK VALVE, DISCHARGE	44-11107	1		2	1	2	1	1	2
CHECK VALVE, INTAKE	44-13100		1		1		1		
CHECK VALVE, DISCHARGE	44-13120		1		1		1		
DIAPHRAGM	62018000500	1	2	2	3	1	2		
DIAPHRAGM	84001001100					1	1	1	2
OILER	P1004002900	1	1	2	2	2	2	1	2
SOFTGOOD PACKING KIT	85001000900	1		2	1	1			
SOFTGOOD PACKING KIT	85001000500		1		1		1		
SOFTGOOD PACKING KIT	85001001100					1	1	1	2
PACKING RETAINER	64042002500	1		2	1	1	1		
PACKING RETAINER	65013002700		1		1				
PACKING RETAINER	84001000800					1	1	1	2
PACKING FOLLOWER	64042002200	1		2	1	1	1		
PACKING FOLLOWER	65013002800		1		1				
PACKING FOLLOWER	84001000700					1	1	1	2

PART NO. 85001000300 – ½" PISTON ASSEMBLY (CHEVRON PACKINGS TO POLYPACK)
 Please Call Newport Scientific, Inc. for further information on this part.

IX. ASSEMBLY DRAWINGS

COMPRESSOR # 46-14021-2 AIR OPERATED TWO STAGE 10 & 30K PSI

46-14021-2	Compressor Assembly Sheet 1 & 2
62037002802	Head Assembly 10,000 PSI
63034001802	Head Assembly 30,000 PSI
44-11102	Intake Check Valve 10,000 PSI
44-11107	Discharge Check Valve 10,000 PSI
44-13100	Intake Check Valve 30,000 PSI
44-13120	Discharge Check Valve 30,000 PSI
44-14110	Inlet Check Valve Single Ball
62006001200	Assembly Relief Valve-Liquid Service
77053000900	Air Drive Double End
Curve 10 & 30K Air	Capacity Curve

COMPRESSOR # 46-14023 AIR OPERATED TWO STAGE 6 & 10K PSI

46-14023	Compressor Assembly Sheet 1 & 2
62037002902	Head Assembly 10,000 PSI
84001001500	Head Assembly 6,000 PSI
44-11102	Intake Check Valve 10,000 PSI
44-11107	Discharge Check Valve 10,000 PSI
44-14110	Inlet Check Valve Single Ball
62006001200	Assembly Relief Valve-Liquid Service
77053000900	Air Drive Double End
Curve 6 & 10K Air	Capacity Curve

COMPRESSOR # 46-14025-2 AIR OPERATED SINGLE ENDED 10K PSI

46-14025-2	Compressor Assembly Sheet 1 & 2
62028003002	Head & Body Assembly 10,000 PSI
44-11102	Intake Check Valve 10,000 PSI
44-11107	Discharge Check Valve 10,000 PSI
44-14110	Inlet Check Valve Single Ball
62006001200	Assembly Relief Valve-Liquid Service
77053001000	Air Drive Single End
Curve 10K SE DE Air	Capacity Curve

COMPRESSOR # 46-14035-2 AIR OPERATED DOUBLE ENDED 10K PSI

46-14035-2	Compressor Assembly Sheet 1 & 2
62037002802	Head Assembly Left Side 10,000 PSI
62037002902	Head Assembly Right Side 10,000 PSI
44-11102	Intake Check Valve 10,000 PSI
44-11107	Discharge Check Valve 10,000 PSI
44-14110	Inlet Check Valve Single Ball
62006001200	Assembly Relief Valve-Liquid Service
77053000900	Air Drive Double End
Curve 10K SE DE Air	Capacity Curve

COMPRESSOR # 46-14060-2 AIR OPERATED SINGLE ENDED 30K PSI

46-14060-2	Compressor Assembly Sheet 1 & 2
63035000902	Head Assembly 30,000 PSI
44-13100	Intake Check Valve 30,000 PSI
44-13120	Discharge Check Valve 30,000 PSI
44-14110	Inlet Check Valve Single Ball
62006001200	Assembly Relief Valve-Liquid Service
77053001000	Air Drive Single End
Curve 30K SE Air	Capacity Curve

COMPRESSOR # 46-14065 AIR OPERATED SINGLE END 6K PSI

46-14065	Compressor Assembly Sheet 1 & 2
85005000100	Head Assembly 6,000 PSI
44-11102	Intake Check Valve 10,000 PSI
44-11107	Discharge Check Valve 10,000 PSI
44-14110	Inlet Check Valve Single Ball
62006001200	Assembly Relief Valve-Liquid Service
77053001000	Air Drive Single End
Curve 6 & 30K Air	Capacity Curve

COMPRESSOR # 46-14067 AIR OPERATED DOUBLED END 6K PSI

46-14067	Compressor Assembly 1 & 2
84001001500	Head Assembly 6,000 PSI Right Side
85005000100	Head Assembly 6,000 PSI Left Side
44-11102	Intake Check Valve 10,000 PSI
44-11107	Discharge Check Valve 10,000 PSI
44-14110	Inlet Check Valve Single Ball
62006001200	Assembly Relief Valve-Liquid Service
77053000900	Air Drive Double End
Curve 6K Air	Capacity Curve

COMPRESSOR # 46-14068 AIR OPERATED TWO STAGE 6 & 30K PSI

46-14068	Compressor Assembly Sheet 1 & 2
84001000300	Head Assembly 6,000 PSI
63034001802	Head Assembly 30,000 PSI
44-11102	Intake Check Valve 10,000 PSI
44-11107	Discharge Check Valve 10,000 PSI
44-13100	Intake Check Valve 30,000 PSI
44-13120	Discharge Check Valve 30,000 PSI
44-14110	Inlet Check Valve Single Ball
62006001200	Assembly Relief Valve-Liquid Service
77053000900	Air Drive Double End
Curve 6 & 30K Air	Capacity Curve

X. SPECIFICATIONS


AIR OPERATED DIAPHRAGM COMPRESSOR SPECIFICATIONS CHART

ITEM	46-14025-2 (SINGLE END 10K)	46-14035-2 (DOUBLE END 10K)	46-14060-2 (SINGLE END 30K)	46-14021-2 (TWO STAGE 10, 30K)	46-14023 (TWO STAGE 6,10K)	46-14068 (TWO STAGE 6,30K)	46-14065 (SINGLE 6K)	46-14067 (DOUBLE END 6K)
Max. Discharge Pressure	10,000PSI			30,000PSI	10,000PSI	30,000PSI	30,000PSI	6,000PSI
Max. Inlet Pressure	Up to Discharge			Up to 10,000 psi	Up to 10,000 psi	Up to 6,000PSI	Up to Discharge	
Recommended Compression Ratio				14 to 1				
Min. Gas Suction Pressure	700		2000	350		150		400
Number of Stages	1				2			1
Max. Air-Drive Pressure					125 psi			
Min. Air-Drive Pressure (for max. rating)					80 psi			
Mounting Position	Vertical	Horizontal	Vertical		Horizontal		Vertical	Horizontal
Air Consumption	20 SCFM	25 SCFM	40 SCFM		45 SCFM		25 SCFM	40 SCFM
DIMENSIONS								
Length	12"	30"	12"	32"	30"	32"	12"	30"
Width	14"	13"	14"	13"	13"	13"	14"	13"
Height	17"	16"	19"	16"	16"	16"	16"	16"


ITEM	46-14025-2 (SINGLE END 10K)	46-14035-2 (DOUBLE END 10K)	46-14060-2 (SINGLE END 30K)	46-14021-2 (TWO STAGE 10, 30K)	46-14023 (TWO STAGE 6, 10K)	46-14068 (TWO STAGE 6, 10K)	46-14065 (SINGLE END 6K)	46-14067 (DOUBLE END 6K)
Drive Air Inlet and Exhaust								
Gas Inlet & Discharge								
Recommended Drive-Air Line Size								
Estimated Weight	70 lbs. net 100 lbs.ship	130 lbs. net 180 lbs.ship	70 lbs. net 100 lbs.ship	130 lbs. net 180 lbs.ship	130 lbs. net 180 lbs.ship	130 lbs. Net 180 lbs.ship	70lbs. 100lbs. Net ship	130 180 1bs.net 1bs.ship
Mounting	4 mounting holes 17/32" dia. on 8- inch center	4 mounting holes 1/2-13 UNC-2B thread, $\frac{1}{2}$ " deep on 4-5/8" centers by 6-inch center 4 mounting holes 17/32" dia. on 8-inch center		4 mounting holes $\frac{1}{2}$ -13 UNC-2B thread, $\frac{1}{2}$ " deep on 4-5/8" center by 6-inch center			4 mounting holes 17/32" dia. on 8" thread 5/8" center by 6" center	4 mounting holes 13 UNC-2B thread $\frac{1}{2}$ " deep on 4 5/8" center by 6" center
Volumetric Displacement per Stroke	0.13 cu. in. 2.15 cc	0.26 in ³ 4.30 cc	0.0785 in ³ 1.25 cc	1 st stage .0.13 in ³ 2.15 cc 2 nd stage .0785 in ³ 1.25 cc	1 st stage .36 in ³ 5.90 cc 2 nd stage 0.13 in ³ 2.15 cc	1 st stage .36 0.36 in ³ 5.90 cc 2 nd stage 0.13 0.0785 in ³ 1.25 cc	0.36 in ³ 5.90 cc	0.72 in ³ 11.80 cc
Speed (max. at free flow)								
Stroke Length (max. under pressure)								
Exhaust Air Vent (if required)								
Oil for Air Lubricator								
Oil for Hydraulic Head								
Speed (max. at free flow)								
Stroke Length (max. under pressure)								
Exhaust Air Vent (if required)								
Oil for Air Lubricator								
Oil for Hydraulic Head								

SAE 20

NORMAL, SAE 20*, HALOCARBON OIL FOR OXYGEN SERVICE

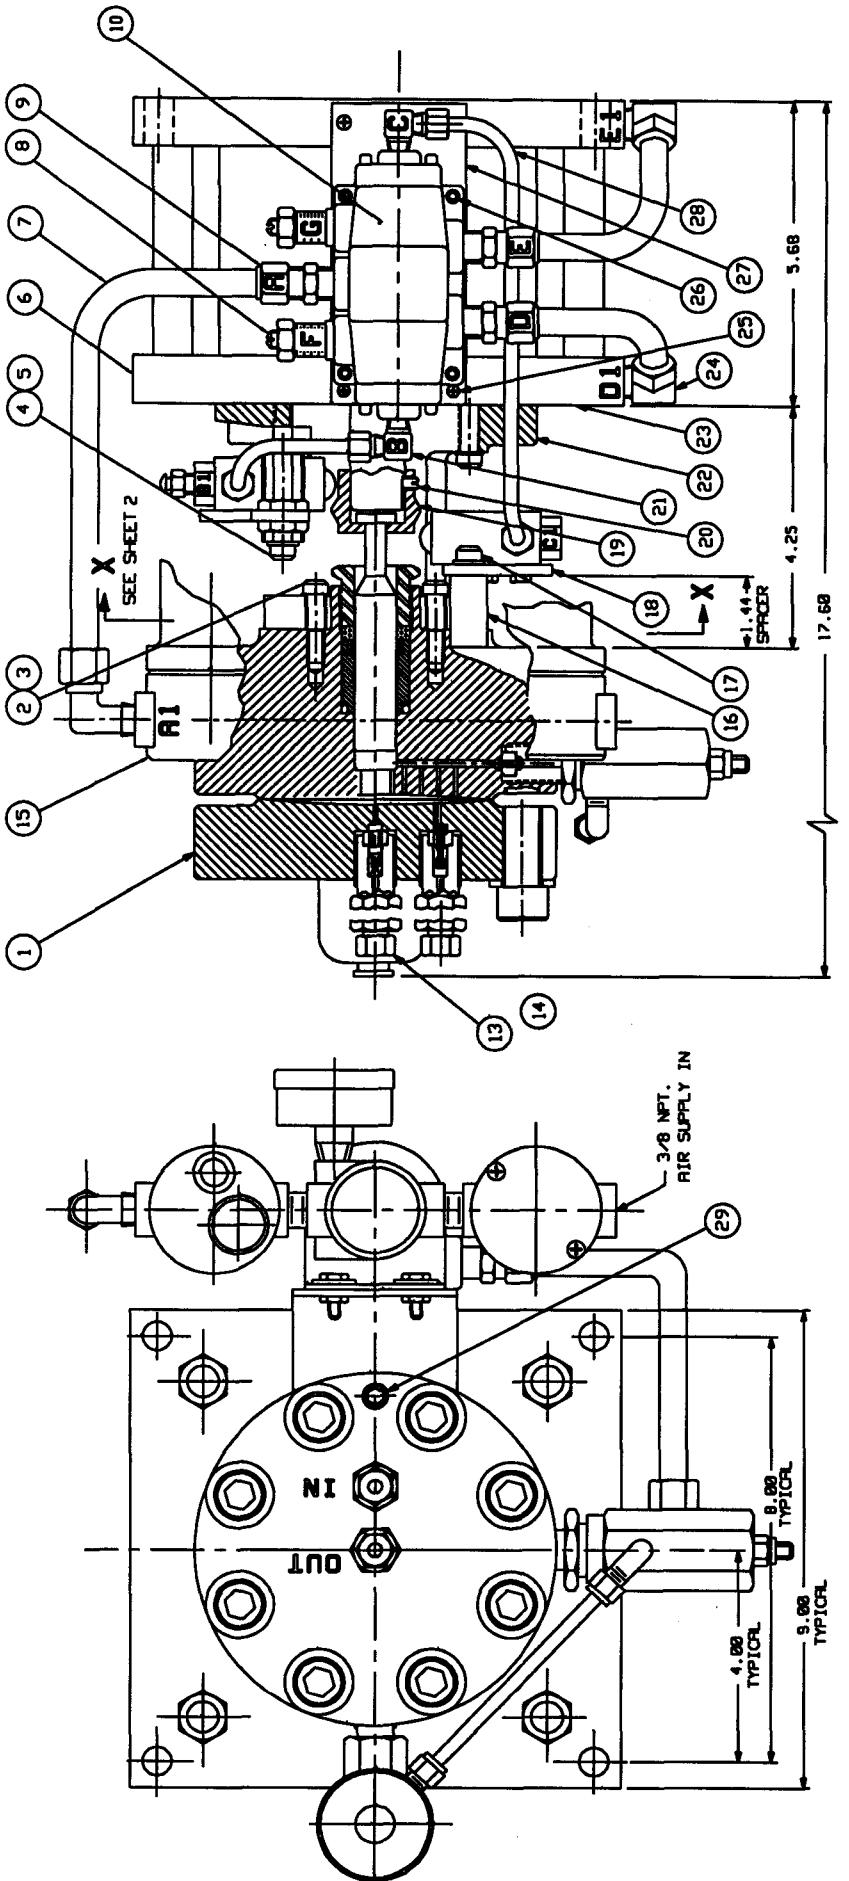

- NOTES:**
1. USE ONE (1) SET SCREEN ONLY FOR END OF SHIFT NEAREST TO FLAT ON SHIFT, HOLD END PLATE OF SHIFT TO A MINIMUM
 2. LOW PRESSURE PNEUMATIC HOOK-UP:
 - A - MAIN AIR SUPPLY INLET, CONNECT TO R1
 - B - LOW PRESSURE TRANSFER, CONNECT TO PILOT VALVE B1
 - C - LOW PRESSURE TRANSFER, CONNECT TO PILOT VALVE C1
 - D - AIR SUPPLY TO LEFT SIDE OF PISTON, CONNECT TO D1
 - E - AIR SUPPLY TO RIGHT SIDE OF PISTON, CONNECT TO E1
 - F - EXHAUST FROM PORT D1 THROUGH MUFFLER TO ATMOSPHERE
 - G - EXHAUST FROM PORT E1 THROUGH MUFFLER TO ATMOSPHERE
 3. ADJUST LUBRICATOR FOR 2 DROPS OF OIL PER MINUTE

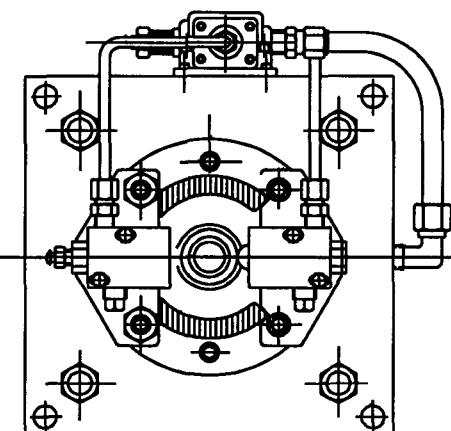

VIEW "X-X"

**UNLESS OTHERWISE SPECIFIED
DIMENSIONS ARE IN INCHES
TOLERANCES:
FRACTIONS \pm
DECIMALS $\pm .002$ XXX $\pm .010$
ANGLES $\pm 1^\circ$
REMOVE ALL BURRS AND SHARP EDGES**

DO NOT SCALE THIS DRAWING

BY NAME DATE FINISH

PREPARED

CHECKED

ENGINEERED

APPROVED

TITLE

AIR OPERATED DIAPHRAGM

COMPRESSOR, VERTICAL, SINGLE

END, 6,000 PSI, 3/4 PISTON

CORE IDENT. NO.

59305

SIZE

PART NO. 46140655

D

DRAWING NO. 4614065A

SEE LIST

**② REPORT
SCIENTIFIC
INC.**

SUPERPRESSURE


2

SCALE WEIGHT SHEET 1 OF 2

ITEM QTY.	DESCRIPTION	PART/DIG. NO.
LIST OF MATERIAL		
29	SCREW, 5/16-18UNC-2A SC.HD.CAP 5/8LG	04650023520 STEEL
28	- TUBE, 1/4 O.D.	P1245-001 COPPER
27	1 BRACKET, VALVE MOUNTING	C20-77053 STEEL
26	4 SCREW, 8-32 UNC-2A, SOC.HD.CAP X 5/8LG	04650022220 STEEL
25	4 SCREW, 10-32 UNC-2A, PAN HEAD X 5/8LG	02250012620 STEEL
24	2 ELBOW, 3/8 NPT X 1/2 I.N. TUBE COMPR.	P215-125 BRASS
23	1 DRIVE UNIT	D10-77053 ALUM
22	1 SPACER	D21-62050 AL. ALLOY
21	2 ELBOW, 1/8 NPTM X1/4 O.D. TUBE COMPR.	P215-251 BRASS
20	1 SCREW, SET 1/4-28UNF-2A X 1/4LG	03830023211 STEEL
19	1 COUPLING	B18-62028 STEEL
18	1 PILOT VALVE ASSEMBLY	C13-63035 PER DETAILS
17	2 SCREW, 5/16-18UNC-2A SC.HD.CAP X 2LG	04650023540 STEEL
16	2 SPACER, TUBE	F26-63035 STEEL
15	1 FIL., REG., LUBR. & BRACKET ASSY.	D24-62050 PER DETAILS
14	1 CHECK VALVE, INTAKE	B44-11102 PER DETAILS
13	1 CHECK VALVE, EXHAUST	B44-11107 PER DETAILS
12	2 SCREW, #2 TRAPPING PAN TYPE B, 1/4LG	022400031111 STEEL
11	1 NAME PLATE	F62-63070 ALUM.
10	1 VALVE, 4-WAY MASTER	F223-77020 PER DETAILS
9	3 CONNECTOR 3/8 NPT. X 1/2 TUBE, COMPR.	P215-1041 BRASS
8	2 MUFFLER, 3/8 NPT.	F40-62028 AL. & BRONZE
7	- TUBE, 1/2 O.D.	P1245-003 COPPER
6	1 PILOT VALVE ASSEMBLY	C14-63035 PER DETAILS
5	2 SPLIT LOCK WASHER 5/16 I.D.	R1061-053 STEEL
4	2 SCREW, 5/16-18UNC-2A SC.HD.CAP 2-3/4LG	04650023548 STEEL
3	6 SCREW, 5/16-18UNC-2A SC.HD.CAP 1-1/4LG	04650023530 STEEL
2	9 WASHER, FLAT 5/16 I.D.	A12-63167 STEEL
1	1 3/4 DIR. PISTON HEAD ASSEMBLY	D1-85005 PER DETAILS
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES		

PROPRIETARY


This document is issued in strict confidence on condition that it is not copied, reprinted, or disclosed to a third party, wholly or in part, without written consent of Newport Scientific Inc.



PREPARED	NAME	DATE	FINISH:	SUPERPRESSURE SCIENTIFIC INC.
CHECKED				
ENGRAVED				
APPROVED				
MATERIAL				

SEE LIST


SCALE	WEIGHT	HEET
-------	--------	------

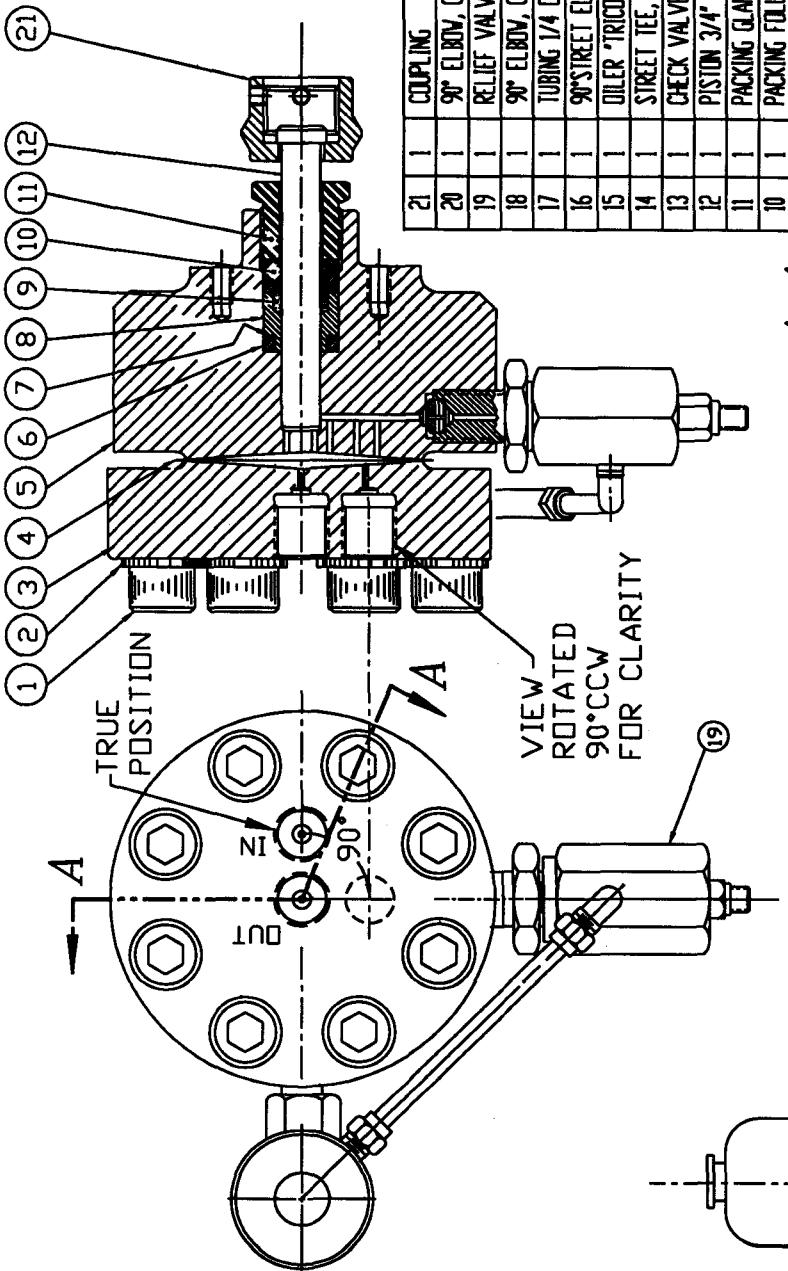

NOTE:
1_MARK OR TAG WITH ASSEMBLY NUMBER


21	1	COUPLING	84001001400	17-4 PH
20	1	90° ELBOW, COMPRESSION 1/8 NPTIN x 1/4 OD. TUBING	P12150001000	BRASS
19	1	RELIEF VALVE - ASSEMBLY	6206001204 PER DETAILS	
18	1	90° ELBOW, COMPRESSION 1/4 NPTIN x 1/4 OD. TUBING	P12150251000	BRASS
17	1	TUBING 1/4 IN. 6' LONG (APPROX.)	P12150001000	COPPER
16	1	90STREET ELBOW 1/4 INP	P12010041000	BRASS
15	1	ODLER 'TRIC' TYPE PISTON	P10040029000	COPPER
14	1	STREET TEE, 1/4 NPTF X 1/4 NPT Male RUN	P02010601000	BRASS
13	1	CHECK VALVE, INTAKE (OIL SIDE)	44-14110 AS PER DETAILS	
12	1	PISTON 3/4" DIAMETER (NOMINAL)	840010005300 TYPE 400C ST. ST.	
11	1	PACKING Q. AND NUT	840010006200	TYPE 416 ST. ST.
10	1	PACKING FULLER	840010007700	AMPD 115
9	1	POLYPAK SEAL PACKING	P16150893000	MOLYTHANE
8	1	PACKING RETAINER	840010008800	AMPD 115
7	1	BACK-UP RING (8-214-1300-9)	P16140100000	BUNA "N"
6	1	"T" RING (2-214)	P16140194000	BUNA "N"
5	1	BODY	840010009300	ELASTUF-A2
4	1	DIAPHRAGM	840010010100	TYPE 302 ST. ST.
3	1	HEAD	840010010200	17-4 PH ST. ST.
2	8	WASHER, PLAIN 21/32 IN. x 1/8 THICK	P16340414000	STEEL, HARDENED
1	8	SCREW 5/8-18NF-2A, SOCKET HEAD CAP x 3" LONG	P16330148000	STEEL BL. DC.
ITEM No. No. REQ'D		DESCRIPTION	PART No.	MATERIAL

SECTION A - A

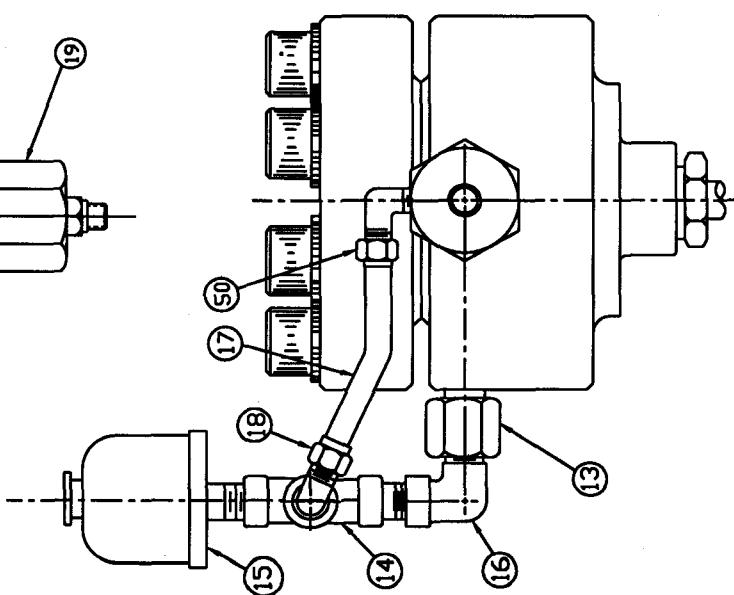

LIST OF MATERIAL

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES	PROPORTIONAL
FRACTIONS & DECIMALS &	DO NOT SCALE THIS DRAWING
ANGLES 20°-30°	DO NOT SCALE THIS DRAWING
SHOULD ALL LINES BE DRAWN WITH 0.030" LINE THICKNESS	FINISH:
REINFORCED STRUCTURE	REINFORCED STRUCTURE
ALL PARTS ARE TO BE MADE OF STAINLESS STEEL EXCEPT AS NOTED	MAX HEAD ASSEMBLY - 6,000 PSI DIAPHRAGM COMP. WITH 3/4 DIA PISTON, SINGLE END AIR OPERATED
SEE SH 2	SEE SH 2
NEXT ASSY USED ON	46-14065
APPLICATION	SEE SH 2
DATE	18-305
REVISION	1
PRINTED	1
BY	2

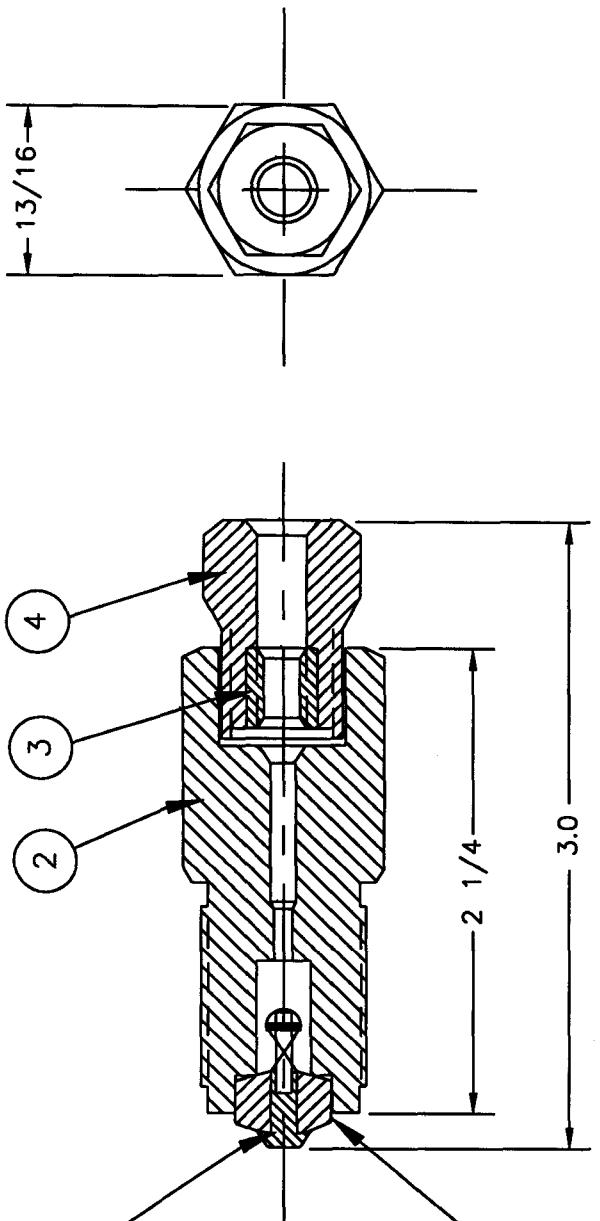

NOTES:


1. STAKE LENS RING OF POPPET; SUB-ASSEMBLY ITEM 1 IN PLACE WITH CENTER PUNCH IF NECESSARY.
 2. TIGHTEN GLAND NUT ITEM 4 HAND TIGHT FOR SHIPPING.
 3. TIGHTEN GLAND NUT ITEM 4 TO A TORQUE OF 15 FT./LBS. APPROX. WITH TUBING INSTALLED.
 4. PRESS RATING = 10,000 P.S.I.

ELECTRO ETCH/MARK

- A. SUPERPRESSURE DIAMOND
 - B. CAT NO.
 - C. PRESSURE RATING (IF APPLICABLE)
 - D. LOT NO. (IF APPLICABLE)
 - E. D.O.M.
 - F. FLOW ARROW (IF APPLICABLE)

C. PRESSURE RATING (IF APPLICABLE)		D. LOT NO. (IF APPLICABLE)																																																	
E. D.O.M.		F. FLOW ARROW (IF APPLICABLE)																																																	
<p>UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES: FRACTIONS ± DECIMALS ± ANGLES ± INCLUDE ALL BARS AND SHIP IDEAS</p> <p>DO NOT SCALE THIS DRAWING</p>																																																			
<p>⑥ NEWPORT SUPERPRESSURE INC.</p> <p>GAS SERVICE VALVE 10,000 PSI INTAKE SOFT SEAT</p> <p>CODE APPROV. NO. 44-11102 DRAWING NO. 44-11102</p>																																																			
<table border="1"> <thead> <tr> <th>ITEM</th> <th>QTY.</th> <th>DESCRIPTION</th> <th>PART NO.</th> <th>MATERIAL</th> <th>NEXT ASSY</th> <th>USED ON</th> <th>APPLICATION</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>1</td> <td>POPPET; SUB-ASSEMBLY</td> <td>66005000100</td> <td>AS PER DETAIL</td> <td></td> <td></td> <td></td> </tr> <tr> <td>2</td> <td>1</td> <td>VALVE BODY</td> <td>62004001000</td> <td>TYPE 316 ST. STL.</td> <td></td> <td></td> <td></td> </tr> <tr> <td>3</td> <td>1</td> <td>INNER SLEEVE</td> <td>45-11316</td> <td>TYPE 416 ST. STL.</td> <td></td> <td></td> <td></td> </tr> <tr> <td>4</td> <td>1</td> <td>GLAND NUT</td> <td>45-11313</td> <td>TYPE 416 ST. STL.</td> <td></td> <td></td> <td></td> </tr> <tr> <td colspan="8">LIST OF MATERIAL</td> </tr> </tbody> </table>				ITEM	QTY.	DESCRIPTION	PART NO.	MATERIAL	NEXT ASSY	USED ON	APPLICATION	1	1	POPPET; SUB-ASSEMBLY	66005000100	AS PER DETAIL				2	1	VALVE BODY	62004001000	TYPE 316 ST. STL.				3	1	INNER SLEEVE	45-11316	TYPE 416 ST. STL.				4	1	GLAND NUT	45-11313	TYPE 416 ST. STL.				LIST OF MATERIAL							
ITEM	QTY.	DESCRIPTION	PART NO.	MATERIAL	NEXT ASSY	USED ON	APPLICATION																																												
1	1	POPPET; SUB-ASSEMBLY	66005000100	AS PER DETAIL																																															
2	1	VALVE BODY	62004001000	TYPE 316 ST. STL.																																															
3	1	INNER SLEEVE	45-11316	TYPE 416 ST. STL.																																															
4	1	GLAND NUT	45-11313	TYPE 416 ST. STL.																																															
LIST OF MATERIAL																																																			

REVISIONS		DESCRIPTION		DATE	APPROVED
SYN	ZONE				

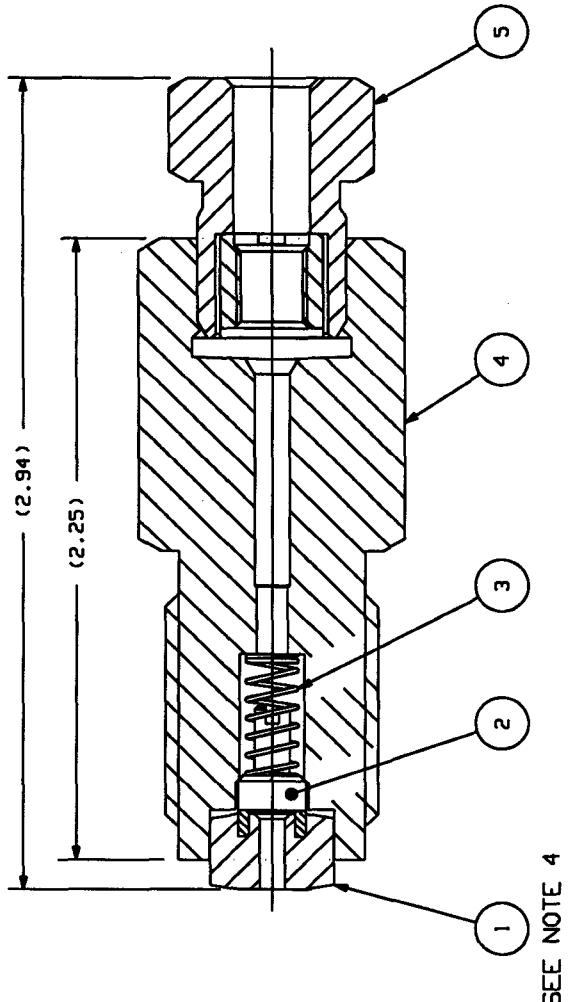

NOTES:

1. PRESSURE RATING = 10,000 PSI.
2. TIGHTEN GLAND NUT, (ITEM 5) HAND TIGHT FOR SHIPPING.
3. TIGHTEN GLAND NUT, (ITEM 5) TO A TORQUE OF 15 FT/LBS (APPROX) WITH TUBING INSTALLED.
4. STAKE LENS RING ASSY, (ITEM 1) IN PLACE WITH A CENTER PUNCH IF NECESSARY.
5. ELECTRO ETCH/MARK

- A. SUPERPRESSURE DIAMOND
- B. CAT NO.
- C. PRESSURE RATING (IF APPLICABLE)
- D. LOT NO. (IF APPLICABLE)
- E. D.O.M.
- F. FLOW ARROW (IF APPLICABLE)

ITEM	QTY	DESCRIPTION	Dwg/Prt No.	MATERIAL	LIST OF MATERIAL	
					UNLESS OTHERWISE SPECIFIED	
5	1	ASSEMBLY, GLAND NUT AND SLEEVE	45-11310	PER DETAILS	CONTRACT	
4	1	BODY	62004001000	TYPE 316 SS	BY	NAME
3	1	SPRING	50029003201	TYPE 302 SS	PREPARED	DATE
2	1	POPPET	66004001000	TYPE 316 SS	CHECKED	
1	1	ASSEMBLY, VALVE SEAT	66005000300	PER DETAILS	ENGR/DSGN	
					APPROVED	

CERTIFICATION
NEXT ASSY. USED ON SEE CHART

APPLICATION	SCALE	WEIGHT	SHEET 1 OF 1

⑧ NEWPORT SCIENTIFIC INC.


SUPERPRESSURE
GAS SERVICE
CHECK VALVE 10,000 PSI DISCHARGE
SOFT SEAT

CODE IDENT. NO. 59505 PART NO. 44-11107
DRAWING NO. 4411107

PROPRIETARY

This document is issued in strict confidence on condition that it is not copied, reprinted, or disclosed to a third party, wholly or in part, without written consent of Newport Scientific Inc.

ELECTRO ETCH/MARK
A. SUPPRESSURE DIAMOND
B. CAT NO.
C. PRESSURE RATING (IF APPLICABLE)
D. LOT NO. (IF APPLICABLE)
E. D.O.M.
F. FLOW ARROW (IF APPLICABLE)

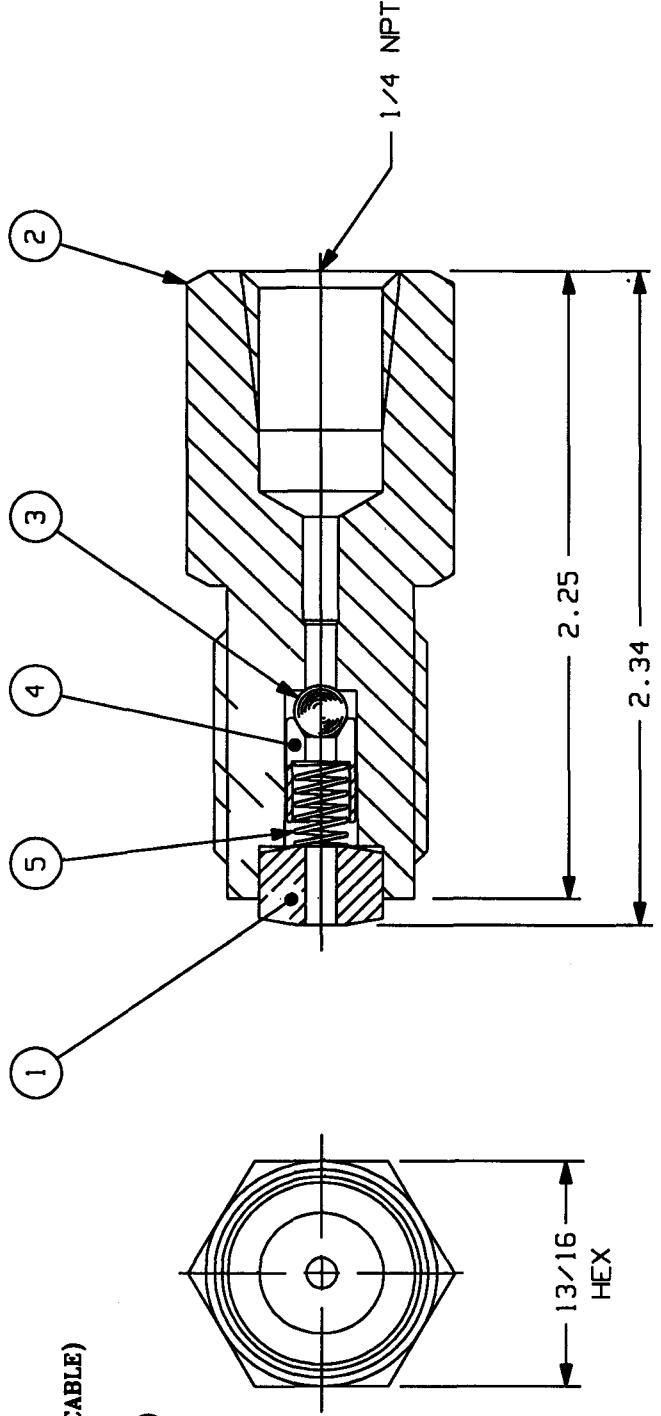

ITEM	QTY	DESCRIPTION	DMG/PART NO.	MATERIAL
LIST OF MATERIAL				

- NOTES:
1. STAKE ITEM 1 (LENS RING) IN PLACE WITH A CENTER PUNCH IF NECESSARY.
 2. DIMENSIONS SHOWN ARE FOR REFERENCE ONLY

PROPRIETARY


This document is issued in strict confidence on condition that it is not copied, reprinted, or disclosed to a third party, wholly or in part, without written consent of Newport Scientific Inc.



⑧ **NEWPORT SCIENTIFIC INC.**
Liquid Service
Check Valve 40,000 PSI Intake

CODE IDENT. NO.	SIZE	PART NO.
59505		44-14110
SCALE	WEIGHT	SHEET 1 OF 1

REVISIONS	
SYM	DESCRIPTION
A	ADDED ITEM #10 10-2-01

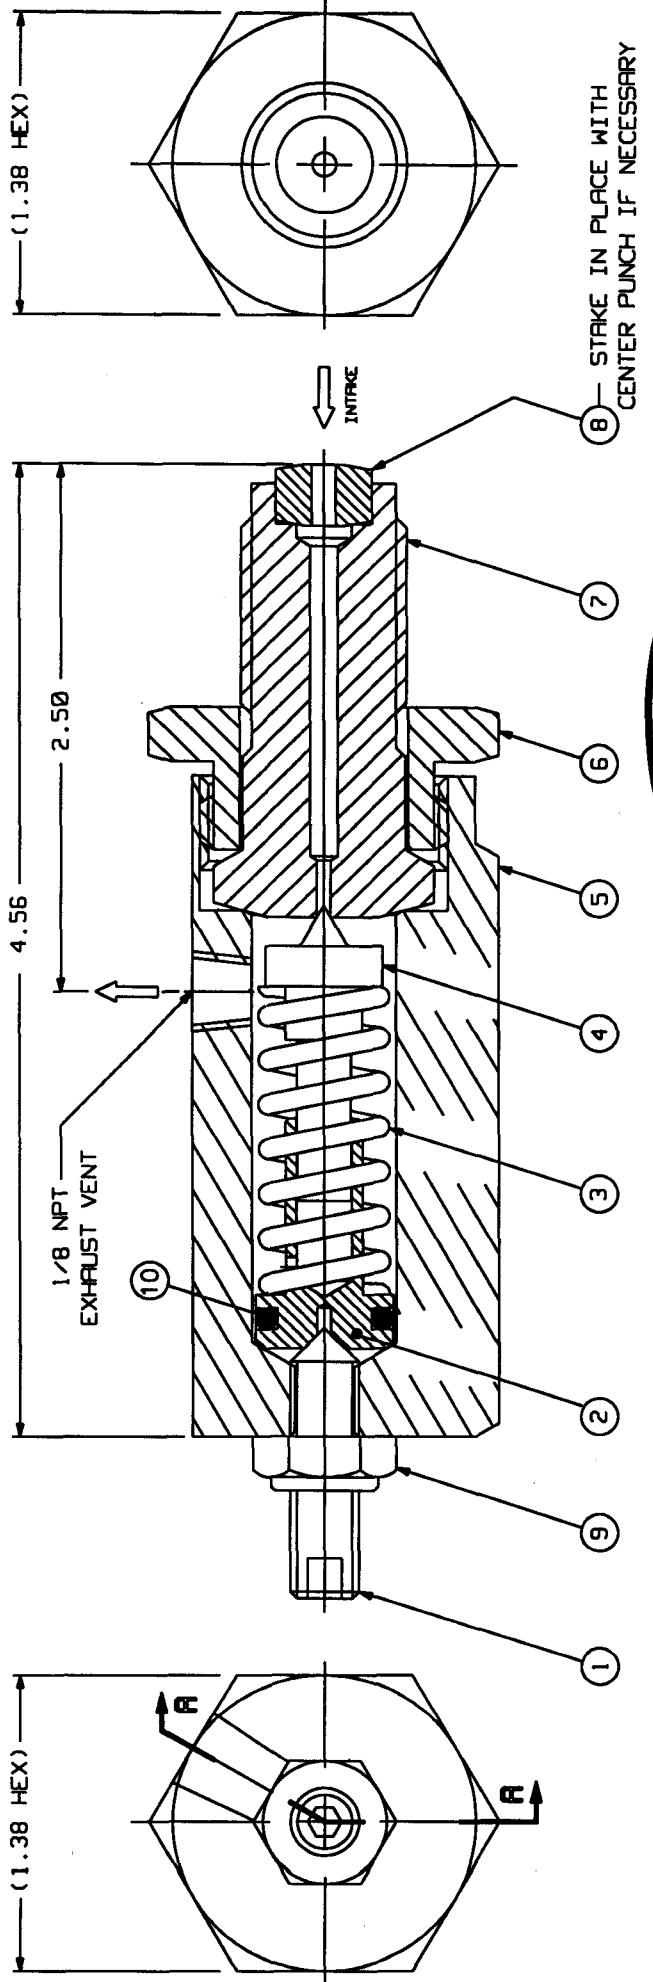

ITEM QTY	DESCRIPTION	DMG/PART NO.	MATERIAL
LIST OF MATERIAL			

ITEM QTY	DESCRIPTION	DMG/PART NO.	MATERIAL	SEE CHART	SCALE 2=1	WEIGHT	SHEET 1 OF 1
10	"O" RING	P1604025100	BUNA "N"				
9	STOP NUT, THIN ELASTIC, 5/16-24UNF-2B	P1054005500	STEEL				
8	GASKET, LENS RING	63038000400	17-4 PH STEEL				
7	VALVE SEAT (SEE CHART)	62006001000	17-4 PH STEEL				
6	NUT	62006001100	CRS				
5	BODY	62006000900	CRS				
4	STEM	64079000200	440C STAINLESS STEEL				
3	SPRING	P1632014900	ALLOY STEEL				
2	GUIDE, SPRING	64079000300	416 STAINLESS STEEL				
1	SET SCREW, SOCKET HD, 5/16-24UNF-2A	62006000800	STEEL				

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES.	PROPRIETARY	
TOLERANCES:	This document is issued in strict confidence on condition that it is not copied, reproduced, or disclosed to a third party, wholly or in part, without written consent of Newport Scientific Inc.	
FRACTIONS $\pm .03$	DECIMALS $\pm .03$	
ANGLES $\pm .03$	RENAME ALL BURRS AND SHARP EDGES	
DO NOT SCALE THIS DRAWING		
BY	NAME	DATE FINISH:
PREPARED		
CHERED		
ENGR'D/DES		
APPROVED		
MAINTEN.		

③ **NEWPORT SCIENTIFIC INC.**

SUPERPRESSURE

ASSEMBLY

RELIEF VALVE FOR


LIQUID SERVICE

CODE DEPT. NO.	SIZE	PART NO.	DRAWING NO.
59505	D	62006001200	1262006


REVISIONS

SYN	DESCRIPTION	DATE APPROVED
④	REDRAWN PER E.C.D. 18695	1/23/87
⑤	ADD MATERIAL LIST	10/18/89
⑥	DRILL INFORMATION CHANGE FROM ROSAN TO KEYLOCK INSERT	9/9/01
⑦	ADDED ITEM 15, KEYLOCK THREAD INSERT	9/9/01

⑤ .453 DIA. DRILL x 3/4 DEEP MIN
TAP 1/2-13 x 5/8 DEEP
SPACED ON 4 3/4 B.C. AS SHOWN
6 PLACES

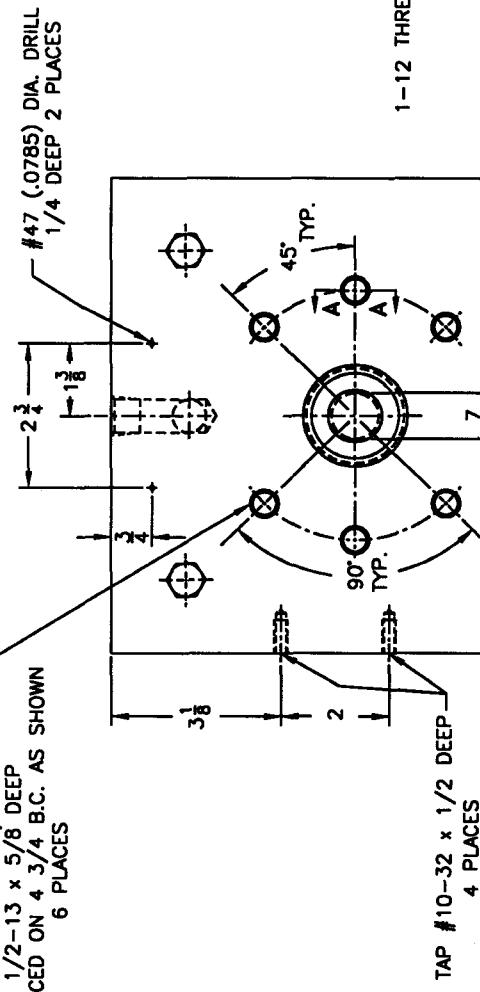

TAP #10-32 x 1/2 DEEP
4 PLACES

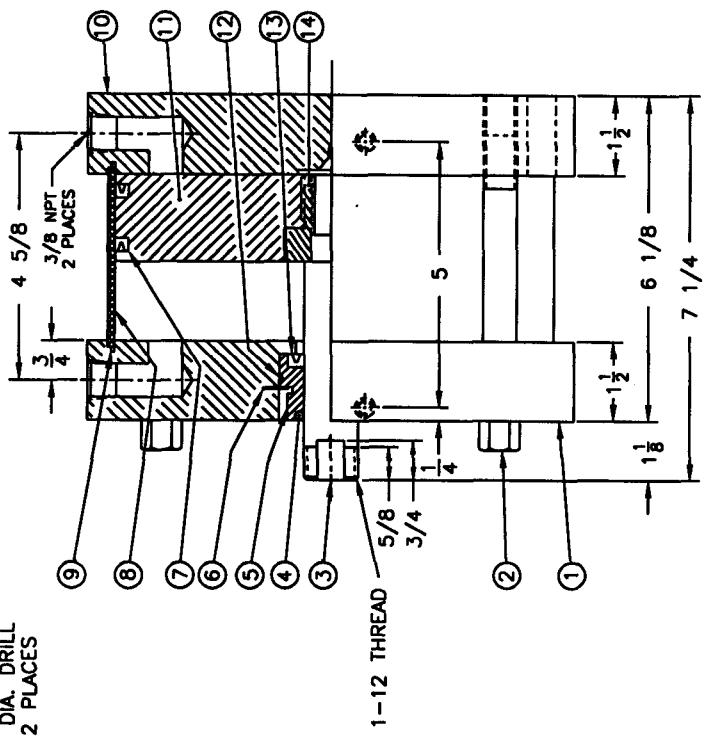

+.000 CLEARANCE
-.005 ALLOWANCE
⑤ KEYLOCK THREAD INSERT
6 REQUIRED

WITH ROSAN INSERTS
INSTALLED
SECTION A-A


ITEM	QTY	DESCRIPTION	Dwg/PART NO.	LIST OF MATERIALS
15	6	KEYLOCK THREAD INSERT	P1811002000	
14	1	INSERT	77053004500	
13	1	SEAL, ROD (S-67-16)	P1825003100	
12	1	RETAINER O-RING (S-69-16)	P1825002700	
11	1	PISTON	77053004400	
10	1	PLATE, BOTTOM	77053004300	
9	2	SEAL, CYLINDER (S-39-16)	P1825002900	
8	1	CYLINDER	77053003400	
7	2	SEAL, PISTON (S-55-16)	P1825002800	
6	1	RETAINER RING	P1620021100	
5	1	RETAINER	77053003700	
4	1	ROD VIPER (S-68-16)	P1825002600	
3	1	ROD, LEFT SIDE	77053004200	
2	4	STUD WITH NUT	77053004100	
1	1	PLATE, TOP	77053003200	

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES:	PROPRIETARY		
FRACTIONS ± DECIMALS ± ANGLES ± 0° -30°	This document is issued in strict confidence on condition that it is not copied, reproduced, or disclosed to a third party, wholly or in part, without written consent of Newport Scientific, Inc.		
RENAME ALL BURRS AND SHARP EDGES DO NOT SCALE THIS DRAWING	BY	NAME	DATE FINISH:
	PREPARED		
	CHECDED		
	DRAWN/DISGN		
	APPROVED		
MANUFACT.	CODE IDENT. NO.	SIZE	PART NO.
SEE NOTES	59505	D	1077053001000
SCALE	NONE	WEIGHT	SHEET 1 OF 1

NOTES:
1. TUBING IS HARD ANODIZED ALUMINUM.
2. PISTON AND ROD SEALS ARE BUNA 'N'.
3. ROD RETAINER IS ELASTUF A2
4. PISTON ROD IS 17-4PH

③
SUPERPRESSURE
INC.

TEST DATA GAS: NITROGEN
 TEMPERATURE : 70°F
 OIL : SAE20
 AIR DRIVE : 90 PSI
 PRESSURE NOMINAL

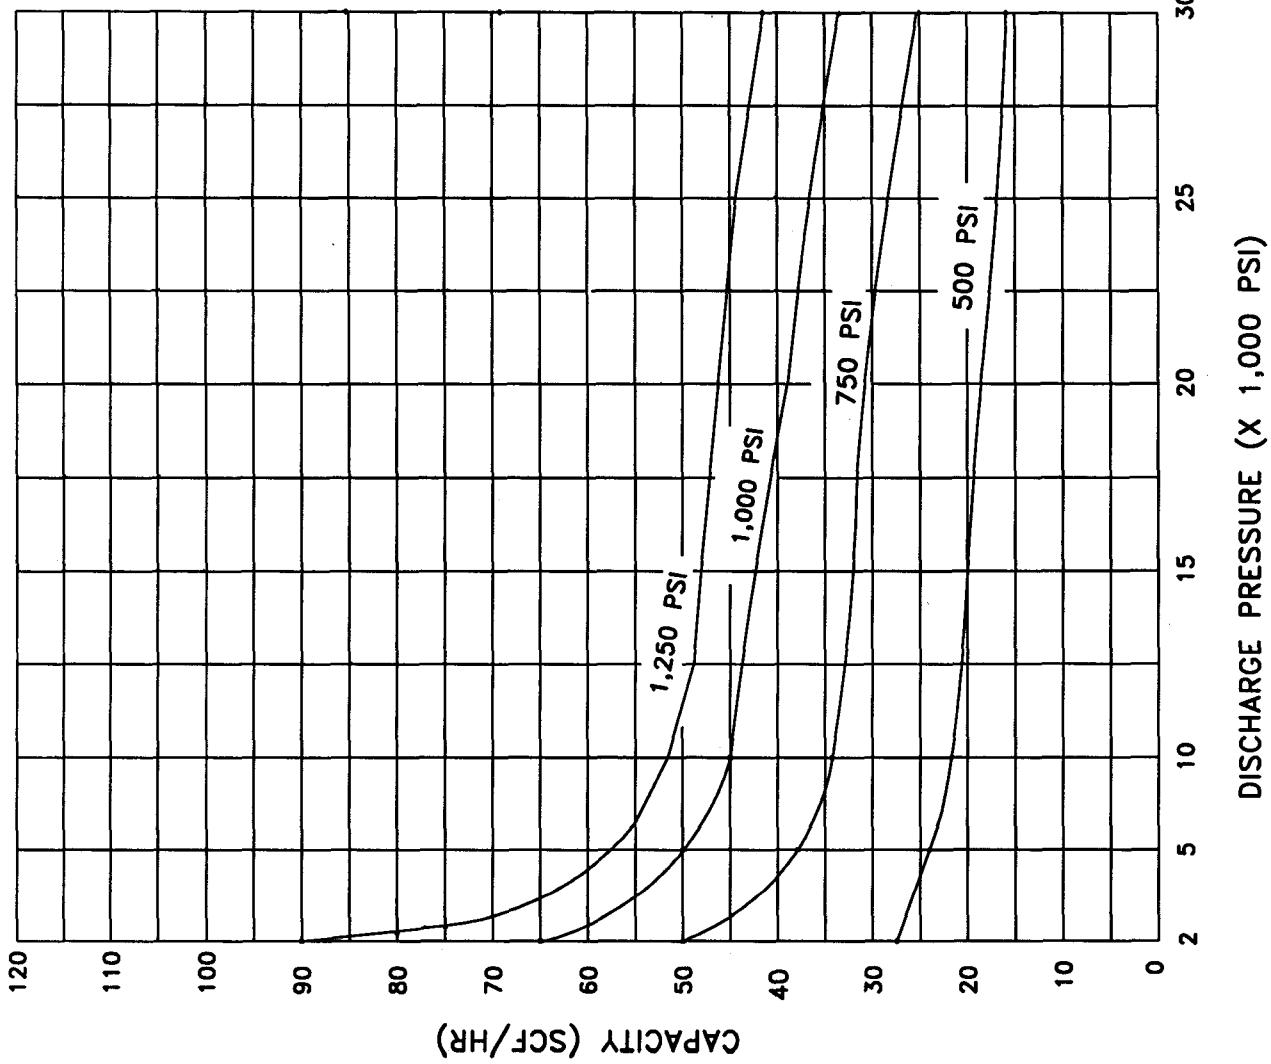

PROPRIETARY
 This document is issued in strict
 confidence on condition that it is not
 copied, reproduced, or disclosed to
 third party, wholly or in part, without
 written consent of Newport Scientific Inc.



CURVE FOR 2 STAGE 6 & 30K PSI	
AIR OPERATED # 46-14068	
CODE IDENT. NO.	SIZE
59505	PART NO. CURVE 6 & 30K AIR
MATERIAL	DRAWING NO. CURV630AIR
NEXT ASSY	USED ON
APPLICATION	
SCALE	WEIGHT
SHEET	OF